

INTERNAL ERROR 0 ON KAPPA

NOTE: This error occurs when there is a loose or disconnected internal connection.

- 1) Check all connections to motors, boards and sensors.**
- 2) If all cables seem secure, disconnect and reseal all connections.**