

# MCI Press Software Change

---

*On-load voltage must be off*

- 1) Use a chip puller to remove the software chip from the press board.
- 2) Remove the 3V lithium battery.
- 3) Short out battery seat posts with a jumper wire and reinstall battery.
- 4) Install new software chip.
- 5) Turn on machine and set zero position.