

Air Filter Replacement

Inside the console is a fan to cool the electronic boards. It is very important to check this filter because when there is too much dust build up overheating of the circuit boards will occur.

Filter P/N 000110

- Turn the main power switch off on the main console.
- To replace the filter you simply open the flip-up panel on the back of the main console. (Top portion of the console).
- The air fan is located below the circuit boards on the right hand side.
- Reach under the fan and pull the filter out.
- The filter can be washed, let it dry out and put it back in place or replace it with a new one.