

BLADE ERROR 1

- 1) Move blade block by hand to check for easy movement.
- 2) Check for slugs in blade block gears.
- 3) Check blade belt for wear and proper tension. Reference blade position.
- 4) Recalibrate blades.
- 5) Replace power board.
- 6) Replace motor.
- 7) Replace main board.