

# Cleaning Non-Membrane Key Contacts

---

## › Wire parameters push buttons

Can be removed by using a small standard head screw driver.

- The push button has a small slot on both sides.
- Place the corner of the screw driver on the side of the push button.
- Carefully remove the button.
- Use electrical contact cleaner on the inside housing.

**Note: Use clean dry air to blow out the internal switch, and or use electrical contact cleaner.**

# Cleaning Non-Membrane Key Contacts

---

## › Numerical key pad push buttons

Can be removed by using a small standard head screw driver.

- Place the corner of the screw driver on the side of the push button.
- Carefully remove the button.
- Remove the blue rubber switch with a pair of tweezers.
- Clean contact inside the blue rubber switch
- Use electrical contact cleaner on the contact inside the housing.