

Saving and Loading Jobs

› Saving Jobs

- Press (F) then (Y./) and (SET). Memory write will be displayed in the lower left corner of the LCD panel.
- Enter two-digit # (example: 04) or three-digit # (example: 003), depending on the software in your machine, then press (SET) to complete the storing of your job.

› Loading Jobs

- Press (F) then (Y./). Memory read will be displayed in the lower left corner of the LCD panel.
- Enter two-digit # or three-digit #, depending on the software in your machine.

Saving and Loading Jobs

NOTE: If at any time during (memory write) or (memory read) the first digit of the two is incorrectly programmed, do not press (CE), otherwise all jobs in memory will be erased followed by 3 audible signals indicating this happening. To avoid this, simply return to original procedure for reading or writing (F) then (Y) then the two digit initially wanted. At no time should (F) then (Y) then (CE) be pressed otherwise, all jobs in memory will be erased as stated above.