

# Timing Belt Adjustment

---

## To adjust or replace the timing belt:

- Locate the timing belt/motor cover and remove the six socket head cap screws with a three millimeter hex key wrench then pull the cover off.
- If you can push the timing belt more than approximately one quarter of an inch, then tensioning or replacement is necessary.
- To replace and/or tension the belt, loosen the four motor mounting screws with a six millimeter hex key wrench.

# Timing Belt Adjustment

---

- Push the motor up and remove the timing belt.
- Install the new belt and push down on the motor.
- Tighten one of the screws and check the tension of the belt by pushing it no more than approximately one quarter of an inch. If it is OK, tighten the remaining 3 screws.